



Miele Duo Logic control panel **1**



Miele control panel **2**



Miele Logic Laundry-tag

Change language

- Move the Miele Logic Laundry-tag for the tag-reader.
- On control panel **1**, select the globe on the bottom-right side of the touchscreen to change the language.

Start washing or drying programme

- Sort the laundry by colour and by care label; empty all pockets.
- Load the drum and shut the door.
- Move the Miele Logic Laundry-tag for the tag-reader.
- On control panel **2** select a programme by turning the programme selector. Turn clockwise to reach the options on the right side of the screen (press to select programme selection).
- On the touchscreen system of control panel **1** the detergent and fabric softener can be adjusted.
- Select <BUY PROG> to pay.
- On control panel **2** press button <START> to finalize.
- To set a SMS reminder at the end of the programme return to control panel **1** and press the button <SMS?>. SMS? = *off* and SMS+= *on*. *

Reserve

- All washing machines can be reserved on all machines (including dryers), unless you have reached your maximum number of reservations.
- Insert the Laundrette-card in the cardreader.
- Go to <RESERVE> ; <NEW > on control panel **1**.
- Select the <DATE> and <TIME>, if desired change the machine and confirm with <OK>.
- If you want to be reminded of the reservation with a text message; press <RESERVE> on control panel **1** and select <SMS?>. Here the preferred time and mobile phone number can be set. SMS? = *off* SMS+ = *on*. *

*Attention: After you change the SMS setting it is always set to *on* or *off*, until you change it again!